






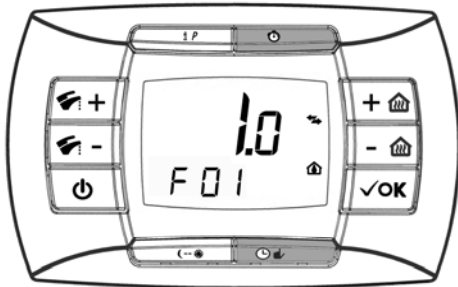


## Changing the parameters to use a 240V thermostat

First complete sections 3.2 and 3.3 in the “Installer’s and User’s Instructions booklet”.

Set the boiler operation mode to the desired setting

Set the heating mode to Manual (displayed symbol )



- 1) Press, for at least 3 seconds, the **iP** button;  
(Display will read CH SL)
- 2) Press the OK button (17 times) until display reads AMBON.
- 3) Use the -  button to change valve from 1 to 0.
- 4) Press the OK button again and the display will read MODUL.
- 5) Press the -  button to change valve from 1 to 0.
- 6) Now press the  button together with the   button (shaded buttons displayed above), the display shows “F01” on the bottom of the screen
- 7) Press the +  button to scroll the parameters list until F10 is displayed
- 8) Press the +  button to modify the parameter value from 00 to 02
- 9) To save the parameter value, wait until the value flashes again (about 5 seconds);
- 10) Press **iP** button to exit.